

# currys essentials

## 2 IN 1 UNIVERSAL REMOTE CONTROL

INSTRUCTION MANUAL  
CRC2N110



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

### Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd. • Maylands Avenue • Hemel Hempstead  
Herts • HP2 7TG • England

(P.N. CRC2N110-001)



## Contents

Unpacking .....	3
Product Overview .....	4
Scope of Application .....	6
Remove the Insulating Strip .....	6
Inserting the Battery .....	6
Programming the Device Codes .....	6
Code Search .....	7
Code Identification .....	8
Transport Button Control .....	9
Volume Control .....	9
Programming the Volume/Mute Functions to any one mode .....	9
Restoring the Volume/Mute Functions .....	10
SHIFT Function .....	11
Normal Operation .....	11
Hints and Tips .....	12
Safety Warnings .....	13

**Thank You** for buying the new Currys Essentials 2 in 1 Universal Remote Control.

We recommend that you spend some time to read this manual in order to fully understand how to operate it correctly.

Read all the safety warnings carefully before use and keep this manual for future reference.

## Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main unit



Instruction Manual  
(P.N. CRC2N110-001)





 



 




Code Book  
(P.N. Code-001)

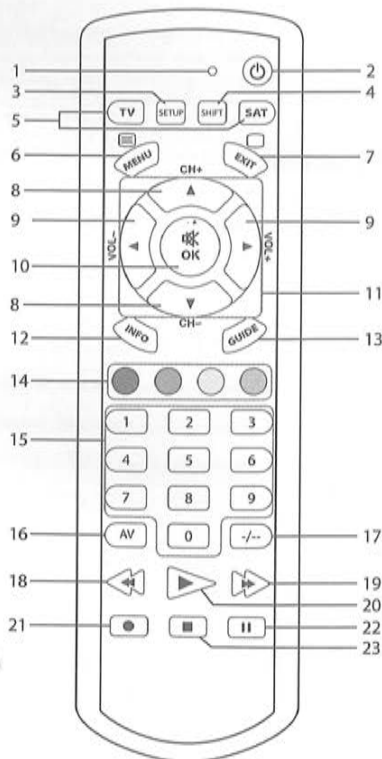

If items are missing or damaged, please contact Partmaster (UK only).  
Tel: 0844 800 3456 for assistance.

## Product Overview



1. **LED Indicator**  
Flashes when the remote is operating or lights continuously in programming mode
2. **⏻**  
Switch the last device on/off.
3. **SETUP**  
To enter the device code.
4. **SHIFT**  
Access secondary functions: MENU, EXIT, ...
5. **Mode buttons**  
To select an AV device (TV/SAT).
6. **Teletext ON**   
**MENU**  
Display the menu. (Press SHIFT to access secondary function)
7. **Teletext OFF**   
**EXIT**  
Exit the menu. (Press SHIFT to access secondary function)
8. **CH +/-**  
Select a Channel.
9. **VOL +/-**  
Adjust the volume.
10. **MUTE**   
Mute and restore the sound of your device.
11. **◀▶/OK** **Direction Button and OK Button**  
Confirm the selection in the device menus. (Press SHIFT to access secondary function)
12. **INFO**
13. **GUIDE**  
Display the EPG (Electronic Program Guide).
14. **Coloured Buttons** (Red / Green / Yellow / Blue)  
Access the TELETEXT items or programme edit when using Digital TV Channels.
15. **0-9 Number Button**  
Direct access to channels and Device Code selection
16. **AV**  
Select to Audio/Video input sources: SCART / HDMI / ...
17. **-/ -**  
Select and switch to a channel that is higher than Channel 9.
18. **REWIND** 
19. **FAST FORWARD** 
20. **PLAY** 
21. **RECORD**   
Press the **RECORD**  button twice to send the command.
22. **PAUSE** 
23. **STOP** 

## Scope of Application

This universal remote control is designed to control 2 devices such as:

TV: TV

SAT: for additional devices (TV, VCR, SAT, DVBT, CABLE, CD, DVD, ...)

## Remove the Insulating Strip

Remove the insulating mylar strip from the battery if the battery is being used for the first time. It is located at the bottom back side of the remote control.



## Inserting the Battery

1. Press and lift the back cover up to open the battery compartment of the remote control.



2. Place the one accessory CR2032 battery in the remote control according to the polarity markings (+ and -) inside the compartment and on the battery.



3. Close the battery compartment cover.

When exchanging the battery, it may be necessary to reprogram the unit. Hence it is advisable to record the codes needed for your devices.

Used battery does not qualify as household waste. The battery must be disposed of at a special collection point for used batteries.

## Programming the Device Codes

The codes of the respective devices can be found in the code book attached to these operating instructions.

**Note:** you can dedicate any device (TV, SAT, VCR, ...) to the **SAT** button. You just need to enter the 4 digit code (found in the code book) of the device, i.e.: a DVD code under the **SAT** button. In any case, follow the steps below:

1. Switch on manually the device you wish to control (TV, SAT, DVD, ...).
2. Press and hold the **SETUP** button for approx. 3 seconds until the LED indicator flashes then illuminates continuously.
3. Release the **SETUP** button.
4. Press the desired mode button (**TV**, **SAT**).



5. Enter the 4-digit code from the code book; the LED indicator will turn off after the last digit has been entered if the code is correct. The LED indicator will flash for 3 seconds then turn off if the code is incorrect.



Point the remote control in the direction of your TV and check the different functions (i.e. the **0** button, the **CH+** button, etc...). Should the device not respond as you expect it to do, you can try to repeat the programming using another code. Please try all the codes indicated for your brand. Select the code that makes your device respond correctly to any command available on your remote control.

If none of the listed codes for your brand operate your device, please try the search methods below.

## Code Search

The code search allows you to find codes of brands that are not stated in the code book. You can dedicate any appliance (TV, VCR, SAT, ...) to the **SAT** button. To prompt the remote control to search for your device code, you first need to choose and enter any 4 digit code for the type of device you wish to control (found in code book). For Example, if you want to program a **SAT** under the **SAT** button, enter any **SAT** code found in the code book and then follow the steps below:

1. Switch on manually the device you wish to control (TV, DVD, SAT, ...).
2. Press and hold the **SETUP** button for approx. 3 seconds until the LED indicator flashes then illuminates. Then release the **SETUP** button.



 
- Press the desired mode button (**TV**, **SAT**).



- Point the remote control at the device you wish to control and press **CH+** once. The remote control starts the search, and sending a code every second. Each time a code is sent, the LED indicator will flash once then illuminate.



- When the device responds to the remote control, press the **OK** button.



- At step 4, you can search for codes more quickly by repeatedly pressing the **CH+** button. As this may involve pressing the button over 200 times, please be patient.
- If at step 5, you fail to press the **OK** button in time, you can step by step return to the code to which the device has responded using the **CH-** button.
- If you device doesn't have the **CH+** button, you can use the **▶** button or the **○** button.
- If all codes have been searched, the LED indicator will flash for about 3 seconds.
- If certain functions of your equipment can't be controlled you have to find a different code for your brand.

## Code Identification

The code identification allows you to identify codes that you have already entered and that are memorised in the remote control. Follow the steps below:

- Press and hold the **SETUP** button for approx. 3 seconds until the LED indicator flashes then illuminates. Then release the **SETUP** button.
- Press the desired mode button (**TV**, **SAT**). The LED indicator flashes.
- Press the **SETUP** button again. The LED indicator will flash once then illuminate.



- To find the first digit, press the **0-9 Number** button until the LED indicator flashes once then illuminates. The number you pressed is the 1<sup>st</sup> digit of the code.
- Repeat the procedure to input the 2<sup>nd</sup>, 3<sup>rd</sup> and 4<sup>th</sup> digits. The LED indicator turns off when the 4<sup>th</sup> digit has input.
- The code identification has now been completed.



## Transport Button Control

If the remote control is controlling in TV, the **◀** / **▶** / **⏪** / **⏩** / **⏸** / **⏹** buttons will control a video recorder, DVD player or DVD recorder programmed on the **SAT** button without having to select the **SAT** button first.



 
Some codes such as those for TV/DVD will have their own transport functions in which case there will be no punch-through.

## Volume Control

You can program the remote control for the **VOLUME** and **MUTE** buttons to either be always controlled by only one specific mode button or individually within each mode button. In its delivered state, each mode button controls its own volume/mute functions.

### Programming the Volume/Mute Functions to any one mode


- Press and hold the **SETUP** button for approx. 3 seconds until the LED indicator flashes then illuminates. Release the **SETUP** button.
- Press and hold the **MUTE** button until the LED indicator flashes once.



- Press a mode button (**TV**, **SAT**) for the device to which the volume and mute functions should be transferred to (e.g. TV). The LED indicator will flash then illuminate.



 
- Press the **MUTE** button; the LED indicator will turn off. If you accidentally selected a device that does not have its own volume control, the LED indicator will flash for 3 seconds.
- The other mode will now punch-through to your chosen mode for volume/mute control.



### Restoring the Volume/Mute Functions

If you have changed the volume/mute functions, as described in the previous two sections, you can reset the functions back to the factory settings:

 - Press and hold the **SETUP** button for approx. 3 seconds until the LED indicator flashes then illuminates. Release the **SETUP** button.
- Press and hold the **MUTE** button for approx. 3 seconds until the LED indicator flashes once then illuminates. Then release the **MUTE** button.
- Press the **MUTE** button the LED indicator will turn off. The volume/mute functions are now restored to their factory defaults.



## SHIFT Function

Some buttons of the remote control can be allocated twice (such as **MENU**, **EXIT**, **◀▶▶** buttons, etc...). To use these functions, press and release the **SHIFT** button, the LED indicator will stay on indicating the Shift mode, press then the function buttons you want. Pressing and releasing the **SHIFT** button will toggle the remote back to normal operation. If no button is pressed after the **SHIFT** button the remote will time-out to normal (non-shifted) operation after 15-20 seconds.



## Normal Operation

After having programmed your remote control for your audio/video devices, your remote control will, in respect of the most common main functions, work like the original remote control of the respective device.

Point your remote control at the respective device and press the appropriate mode button (**TV**, **SAT**). All functions will now be activated by pressing the respective function button of your remote control. For each transmitted IR signal, the LED indicator illuminates.

## Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

Problem	Cause / Solution
The remote control does not work.	<ul style="list-style-type: none"><li>• Check to see if there are any objects between the device and the remote control causing an obstruction. Ensure that you are pointing the remote control directly at the device.</li><li>• Ensure that the batteries are installed with correct polarity (+ to +, - to -).</li><li>• Install new batteries.</li></ul>
Several device codes are listed under the brand of my device. How can I determine the right device code?	<ul style="list-style-type: none"><li>• To determine the right device code for your device, try the codes successively until most of the functions of the device are working properly.</li></ul>
The device only responds to a few functions of the remote control.	<ul style="list-style-type: none"><li>• Test further codes until the devices respond appropriately to more functions.</li></ul>

## Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.

### Damage

- Please inspect the unit for damage after unpacking.

### Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

### Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

### Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage.

### Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

## Supervision

- Children should be supervised to ensure that they do not play with the remote control.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

## Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

## Maintenance

- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.